

Fox 2.0" Shock Valving Chart

Air Shock / Emulsion Shock / Remote Reservoir Shock



Kartek Off-Road
2871 Ragle Way
Corona CA 92879
www.kartek.com
951.737.7223




COMPRESSION DAMPING

VALVE OUTSIDE DIA.	#30	#35	#40	#45	#50	#55	#60	#65	#70	#75	#80	#85	#90
1.600"	0.008	0.008	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015
1.425"	0.008	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015
1.350"	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015
1.100"	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015	0.015
.950"	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015	0.015
.800"	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020	0.020

REBOUND DAMPING

VALVE OUTSIDE DIA.	#30	#35	#40	#45	#50	#55	#60	#65	#70	#75	#80	#85	#90
1.425"	0.008	0.008	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015
1.350"	0.008	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015
1.100"	0.008	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015
.950"	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015	0.015
.800"	0.008	0.010	0.010	0.010	0.010	0.012	0.012	0.012	0.012	0.015	0.015	0.015	0.015
.750" BACK UP	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200	0.200

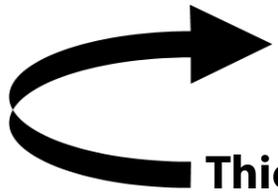

**Thick washers just below the nut. Not sold in the shim "kits".
Some Fox shocks now use 0.875" dia. washers.**